

## INSTALLING A GARBAGE DISPOSAL

This is a standard basket strainer drain assembly. It is designed for attaching your sink to your standard plumbing drain. It cannot be used with a garbage disposal. If you are installing a garbage disposal, you have to use the "FLANGE" that comes with the disposal.

### ATTENTION INSTALLER

- Read all instructions carefully before installation. Inspect the item and make sure you have all the parts shown in the parts list.
- If any part is missing or damaged, please contact Ruvati Support at 1-855-478-8284 or [www.ruvati.com](http://www.ruvati.com).
- Consult with a professional plumber if you encounter difficulties or are unsure about any step in the process.

Register your product at: [www.ruvati.com/register-product](http://www.ruvati.com/register-product)

**RUVATI®**

**Address:** 2705 Meister Pl, Round Rock, TX 78664

**USA Phone:** 1.855.478.8284

**Email:** [info@ruvati.com](mailto:info@ruvati.com)

**RUVATI®**


## INSTALLATION GUIDE

### DEEP BASKET STRAINER WITH STOPPER

RVA1027



## INCLUDED IN BOX

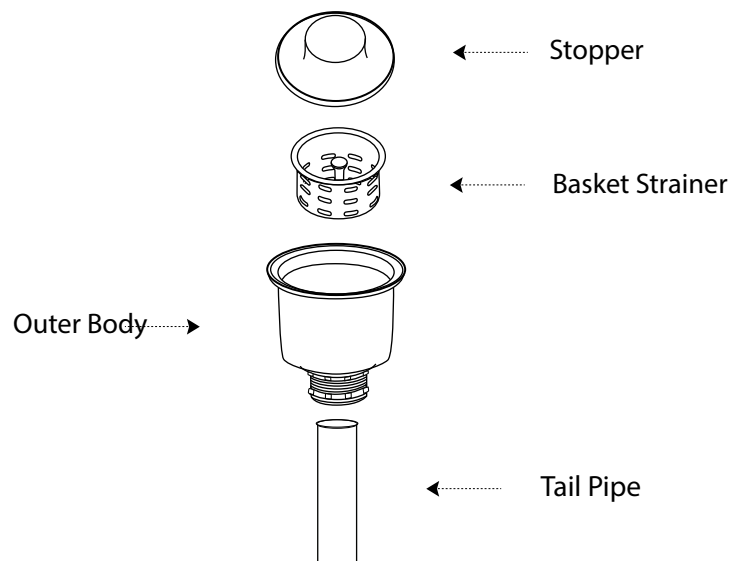

## INSTALLATION GUIDE

1. Use a pipe wrench to loosen and remove the old basket strainer. If there's a disposal unit, disconnect it from the old strainer as well.
2. Attach the drain to the sink as shown. Insert the Inner Flange into the sink drain hole from the top side of the sink.
3. The White Foam Washer goes above the sink. You can also use plumber's putty **INSTEAD** of the foam washer.  
NOTE: If you use plumber's putty, do not use the foam washer. You can discard it.
4. The Black Rubber Gasket, place it under the strainer from underneath the sink. Make sure ribbed side is up.

4. From underneath the sink, thread the Lock Nut onto the strainer's Tail Pipe. Tighten the lock nut by hand, then use a wrench to snug it up a little more. Be careful not to overtighten, as this could damage the sink or strainer.
5. Turn the water supply back on and run water through the sink. Check underneath for any leaks around the strainer and tailpiece connections. If you notice any leaks, tighten the connections slightly until they stop.

