

## INSTALLING THE ORGANIZER

### Note:

Install only on a solid, flat cabinet floor. Confirm that the basket can extend fully without contacting the cabinet door, hinges, plumbing, garbage disposal, or other obstructions.

### ATTENTION INSTALLER

- Read all instructions carefully before installation. Inspect the item and make sure you have all the parts shown in the parts list.
- If any part is missing or damaged, please contact Ruvati Support at 1-855-478-8284 or [www.ruvati.com](http://www.ruvati.com).
- Consult with a qualified installer if you encounter difficulties or are unsure about any step in the process.

Register your product at: [www.ruvati.com/register-product](http://www.ruvati.com/register-product)

**RUVATI®**

**Address:** 2705 Meister Pl, Round Rock, TX 78664

**USA Phone:** 1.855.478.8284

**Email:** [support@ruvati.com](mailto:support@ruvati.com)

**RUVATI®**

## INSTALLATION GUIDE

### UNDER-SINK WORKSTATION ACCESSORY ORGANIZER




RVA1582

## INCLUDED IN BOX




Pull-Out Organizer Assembly

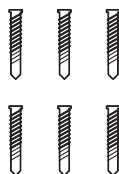

Screws


## PRODUCT DIMENSIONS

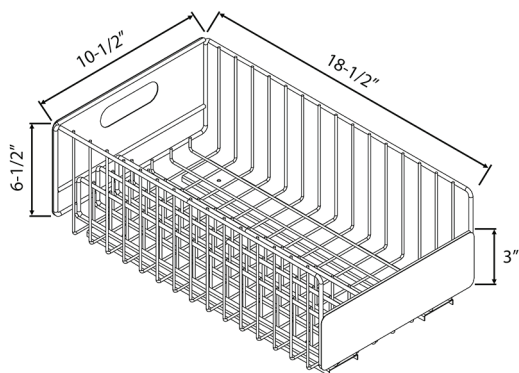


Size: 18-1/2" (length) x 10-1/2" (width) x 6-1/2" (height)

## TOOLS REQUIRED (NOT INCLUDED)

Pencil

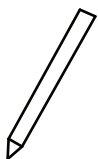

Drill

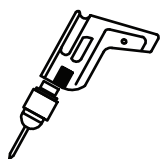


Screwdriver




## INSTALLATION GUIDE

### 1 POSITION AND MARK

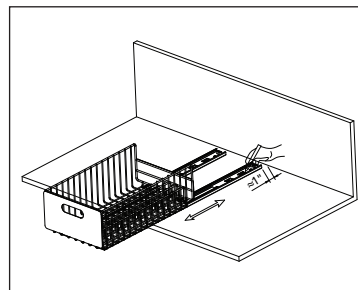


Remove cabinet contents. Place the organizer on a clean, level cabinet floor with the front panel facing the opening. Keep both slide rails parallel. Start with the front of the rails approximately 1 in. behind the cabinet front edge, then adjust for door and hinge clearance. Extend the basket and mark the center of each mounting slot.

### 2 DRILL PILOT HOLES

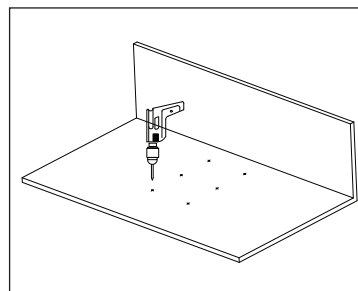

Move the organizer aside. Drill shallow pilot holes at the marked locations. Use a bit appropriate for the cabinet-base material and the supplied screws. Keep the drill vertical and do not drill through the cabinet floor.

### 3 SECURE AND TEST

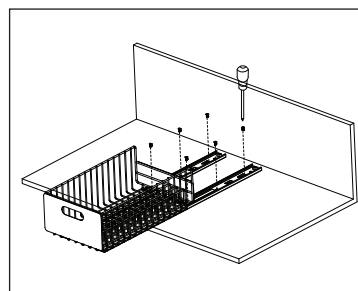

Return the organizer to position and align the slide mounting slots with the pilot holes. Install the supplied screws and tighten securely without overtightening. Pull the basket fully out and push it in several times to confirm smooth, unobstructed operation.

**Final Check:** Confirm all screws are secure and the basket clears doors, hinges, and plumbing. Load compatible cutting boards, drying racks, colanders, and workstation accessories evenly.